


# XL marlin Lighting

## Sport Light (OLSPL ) installation Instruction

The user: Thank you for your purchase of this product, read this instruction manual before usage


1. Model: OLSPL
2. Rated Voltage: AC180~305V 50-60Hz
3. Rated Power: 1500W
4. IP Grade: IP66
5. Operating Temp.: -40°C~+60°C

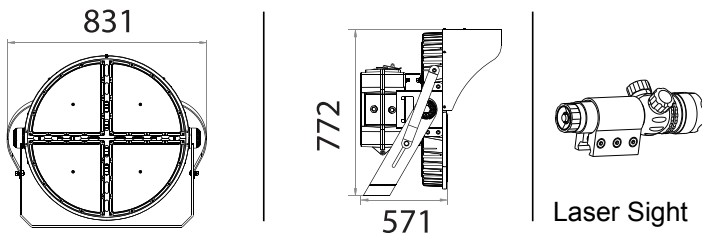


- Always disconnect the power supply before installing or performing any maintenance operations.
- Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.
- These luminaires are widely used in commercial lighting, home decoration lighting, art gallery and museums.
- Only can be touched after 3 minutes later when power off, so as to avoid burns.
- Dismantling and refit are forbidden
- Installation on inflammables is forbidden.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.


- 1- Make holes on the surface where be installed to fit the projector bracket to place the screw pins.

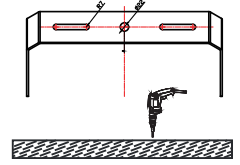

- 2- Once holes have been made, attach the floodlight bracket to the surface as shown in the following image

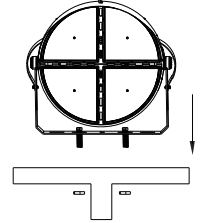


- 3- Fix driver box on the pole when needed

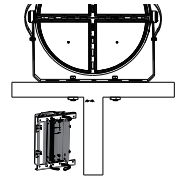


### 4-WIRING

- A- Unlock the buckles and open the driver box.
- B- Open the junction box on the fixture
- C- Pull the output cable from driver box into the junction box and rewire into the terminal inside.
- D- Pull the input cable into the driver box and wire into the terminal inside.

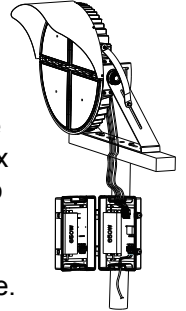


- 5- Connect the luminaire to the supply voltage by connecting the cables with their respective colors as shown in the following indications.

Connections	
Cable colour:	Supply type:
Brown	Phase
Yellow&Green	Ground
Blue	Neutral

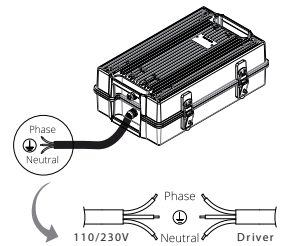


### 6- ADJUST LIGHT DIRECTION


- A- Fix the laser sight on the connecting accessories

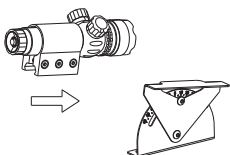


- B- Fix the laser sight on the fixture

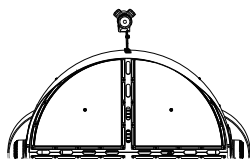

- C- Turn the laser sight on

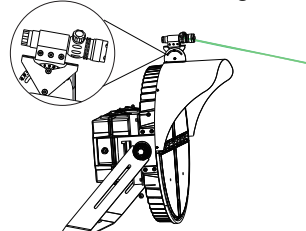

- D- Adjust the bracket to an angle same with that of laser sight.

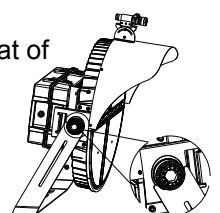

The light source of this luminaire is not replaceable; when the source reaches its end of life the whole luminaire shall be replaced

Welcome you again to buy our products